

# OZZ RL1

88503

## Before installation

1. Before installation, check local laws and regulations, as well as those of any regions your vehicle may travel to, to ensure the auxiliary lights comply with all requirements.
2. Carefully read all installation instructions prior to beginning.
3. Verify that the dimensions and weight of the lamps and devices are suitable for your vehicle.
4. A small amount of internal moisture may occur but will be expelled through the vent after 2-4 operating cycles.
5. Operating Voltage: 10-30V DC.

## Mounting

1. Firstly, verify that all the components and accessories are included in the box. Test the lamp before installation.
2. Bracket mounting, see figure 01.
3. Reverse lamp mounting (ECE R148), see figure 02.
4. Connect power line to the corresponding power connector. Ensuring polarity is correct.

## Wiring connections & Functions

Red = Positive, +, *Flood Beam*  
Black = Negative, -

*Please note!*

*Do not use the product if the lamp housing or lens is damaged upon removal from the packaging.*

*Ensure the power is turned off during installation.*

Figure 01

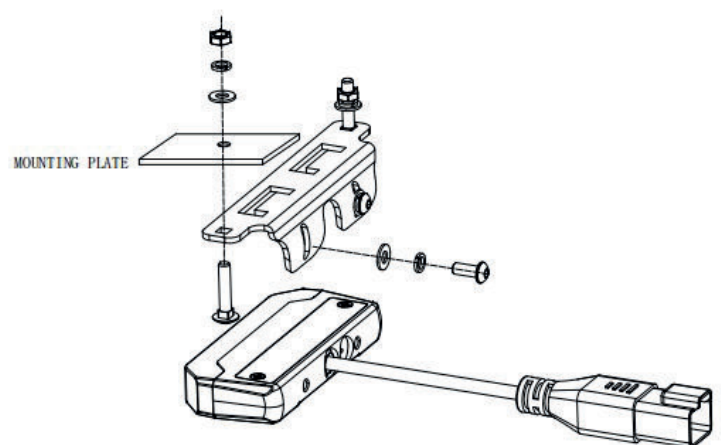


Figure 02

